

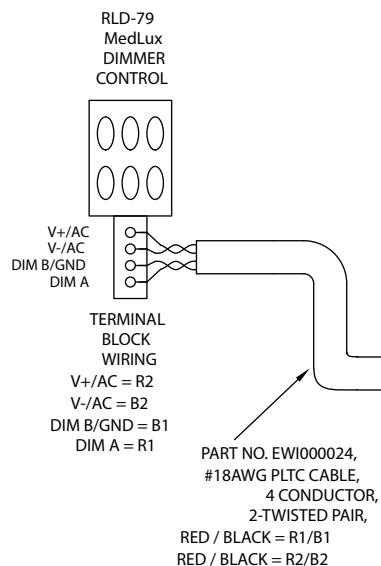
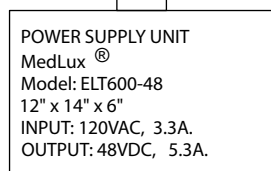



CONTROL ROOM

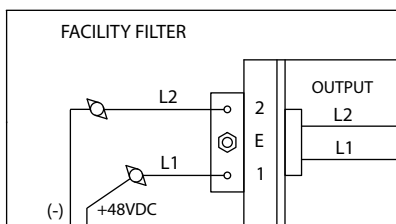

EQUIPMENT ROOM

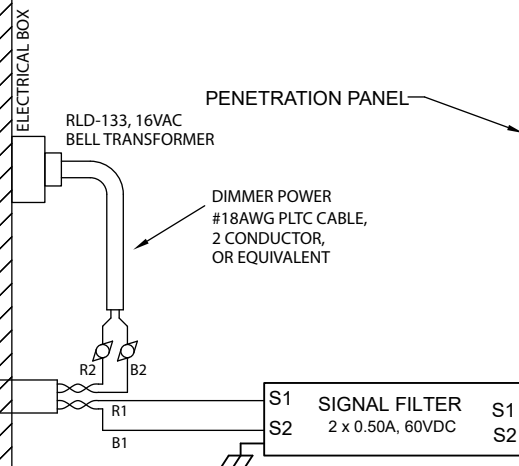

INPUT POWER
CONDUIT

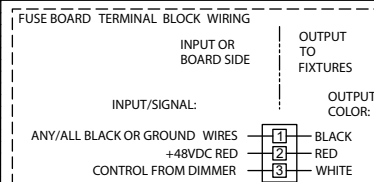


MRI SHIELD ROOM

GPI-21, #12 AWG, 300V,
CLASS 2 CABLES
WITH CONNECTOR.
UL LISTED CL3P CABLE

GPI
CONNECTORS

GW1040401

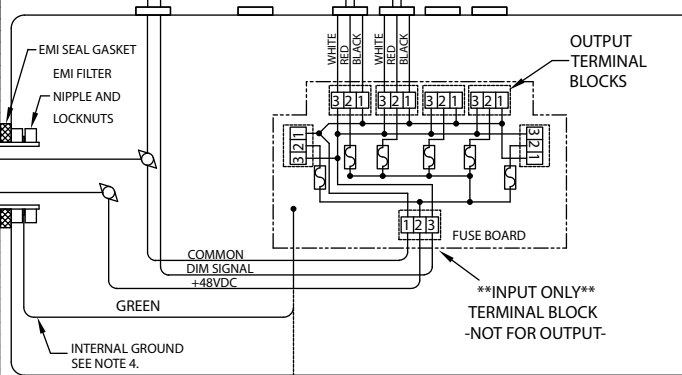

CURRENT LIMITER JUNCTION BOX
FUSE TYPE TE5, 1.6A, "TIME LAG"

LEGEND:



N/C = NO CONNECTION

NOTES:

1. MUST BE GROUNDED OR BONDED PER NATIONAL ELECTRIC CODE AND ALL LOCAL ELECTRIC CODES.
2. DO NOT CONNECT MORE THAN ONE GPI PER FUSED CIRCUIT.
3. A GPI CIRCUIT CAN BE CONNECTED TO ANY FUSED TERMINAL BLOCK IN JUNCTION BOX.
4. EITHER INTERNAL JUNCTION FUSE BOX GROUND RETURN OR EXTERNAL SYSTEM GROUND RETURN IS REQUIRED.



Everbrite
LIGHTING

MEDLUX®

MRI COMPATIBLE LED GRAPHIC PANEL ILLUMINATOR
WITH CONTROL ROOM DIMMER - TYPICAL WIRING
GW4SF0404CRW-102 SYSTEM DIAGRAM

JUNE 2024

NOT TO SCALE